



***Know What You're Getting Into.***

**User Information for Durachem® 500  
Protective Ensemble for Hazardous Materials  
Emergencies and CBRN Terrorism Events**

**Certified Model  
D5H458 94  
NFPA 1994 – 2018  
Class 1 and 2  
Edition**

**THIS INFORMATION PACKET MAY NOT  
BE REMOVED EXCEPT BY THE END USER**

Kappler, Inc.  
P.O. Box 490  
115 Grimes Drive  
Guntersville, AL 35976  
256-505-4005 Phone  
800-600-4019 Toll free  
256-505-4151 Fax  
[info@kappler.com](mailto:info@kappler.com)

User Information for  
Durachem 500 Protective Ensemble

Certified Model  
NFPA 1994-2018 Edition

# CONTENTS

Safety Considerations.....	1
Safety Symbols used in this manual.....	1
Warnings and Limitations .....	2
<i>Additional Equipment</i> .....	3
<i>Always Use the Buddy System</i> .....	5
<i>Chemical Permeation Data</i> .....	5
<i>Static Electricity</i> .....	6
<i>Avoid Continuous Exposure</i> .....	6
<i>Communications</i> .....	7
Full Visual Inspection .....	8
Returning the Garment.....	9
<i>Storage</i> .....	10
Closure Lubricants .....	10
Marking Recommendations and Restrictions.....	10
Recommended Undergarments.....	10
Respirator Consideration for Ensembles .....	11
Sizing Considerations .....	11
Donning the Garment.....	11
Doffing the Garment.....	13
Interface Issues.....	13
Decontamination and Cleaning of Chemical and Biological Contamination.....	14
<i>Decontamination Solutions</i> .....	14

<i>Field Decontamination</i> .....	14
<i>Decontamination before Reuse</i> .....	15
<i>Maintenance and Cleaning</i> .....	16
Retirement Considerations .....	16
Disposal .....	16
Warranty information .....	17
APPENDIX A-Technical Data Package.....	19
NFPA 1994 Performance Data.....	19
Sizing Information.....	19
Garment Material and Component Descriptions .....	19
Sock Boot or Bootie Material .....	20
Physical Foot Protection.....	20
Zipper/Closure Type and Material .....	21
Material Seam Types and Composition.....	21
Testing Devices.....	22
External Gasket Types and Materials.....	22
Type of Style Head Protection Accommodated with this Garment.....	22
Durachem® Glove Sizing Chart.....	23
APPENDIX B - Durachem® Sizing Chart.....	24
APPENDIX C - Durachem® 500 Inspection Test Log .....	25

## SAFETY CONSIDERATIONS

Be sure to read, understand, and follow the information in this manual and Kappler's website, [www.kappler.com](http://www.kappler.com), and all applicable federal, state and local occupational safety and health statutes. For users outside the United States, please consult national or other applicable personal protective equipment regulations. Proper use, consistent with NFPA 1500, Standard on Fire Department Occupational Safety and Health Program, and 29 CFR is required.

## SAFETY SYMBOLS USED IN THIS MANUAL

While reading this manual, you will come across a number of warnings concerning some of the risks and dangers you may face while using the device. These warnings contain "signal" words that will alert you to the degree of hazard you may encounter. These words, and the hazards they describe, are as follows:



### warning

*Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.*



### caution

*Indicate a potentially hazardous situation which, if not avoided, could result in physical injury or damage to the product. It may also be used to alert against unsafe practices.*



## NOTICE

*Indicates additional information on how to use the garment*

## WARNINGS AND LIMITATIONS



### warning

*There are uses, environments, and chemicals for which these garments and/or fabrics are unsuitable. It is the responsibility of the user to review available data and verify that the garment and/or fabric is appropriate for the intended use and meets all specified and/or industry standards*



### caution

*This garment must be used in combination with additional PPE, which include the following:*

*Separate full-face respiratory protection such as a self-contained breathing apparatus (SCBA) or an external breathing air supply (airline system with garment pass-through) with escape bottle. NFPA compliant garments must use NIOSH CBRN approved SCBA.*

*Separate foot and lower leg protection such as chemical protective boots.*

## ***Additional Equipment***

Additional personal protective equipment that should be considered includes:

- ▶ Head protection.
- ▶ Hearing protection may be required due to high levels of external noise or high noise levels generated by supplied air systems.
- ▶ Other protective equipment that may be warranted based on the situation.



### **caution**

#### **Wearers Must be Physically Fit**

*Garments should only be worn by persons who are in good physical condition. Working in a totally encapsulating garment is strenuous. In an emergency situation or hot environment, the wearer may experience heat stress. Persons who show symptoms of heat stress such as nausea, dizziness, or excessive heat build-up should leave the work area immediately and doff the garment as quickly as possible. Persons in doubt about their physical condition should check with a physician before wearing these garments.*

*If any of the following symptoms develop during use of this garment, immediately leave the hot zone, undergo field decontamination (if exposed), and doff the garment.*

*(continued)*

- *Fever*
- *Difficulty breathing*
- *Nausea*
- *Excessive tiredness*
- *Dizziness*
- *Numbness*
- *Any unusual odor or taste*
- *Eye or skin irritation*
- *Narrowing or dimming of vision*
- *Claustrophobia*
- *Loss of balance or orientation*

### **Manage and Prevent Heat Stress**

*This garment interferes with the natural regulation of body temperature. This can lead to a rise in core body temperature and heat stress. The wearer should be aware of the symptoms and treatment of heat stress. The wearer can take several steps to limit and/or prevent heat stress; such as the use of a cooling system, and working in accordance with a conservative work/rest schedule. The maximum time the garment can be worn depends on such variables as the air supply, ambient condition, climate inside the garment, physical and psychological condition of the wearer, work rate and work load. The TLV™ pocket guide from the American Conference of Governmental Industrial Hygienists (ACGIH, Cincinnati) provides corrected heat stress limits for totally encapsulating garments. Similar information is available on the federal OSHA website ([www.OSHA.gov](http://www.OSHA.gov)).*

## *Always Use the Buddy System*

Never work alone while wearing this garment. A minimum of two people should enter contaminated areas together. It is important to have someone available to assist in the event of an emergency. That person will require the same level of protection as the person needing emergency assistance.

## *Chemical Permeation Data*

Before using a garment in a chemical situation, consult the chemical permeation data appropriate to the garment material. This information is to be used as a guide only. The permeation performance of any material depends on a number of factors including chemical concentration, temperature, time and amount of exposure, etc. Due to the large number of variables, it is impossible for all garment materials to be tested against all chemicals, all combinations or mixtures, and all temperatures at which the chemical might be encountered.

Chemical permeation tests are performed under laboratory conditions -- not actual workplace conditions. They address chemical breakthrough characteristics and do not take into consideration physical performance characteristics that affect barrier such as abrasion, flex fatigue, puncture, tear, oxidative degradation, or degraded performance due to previous contamination.

No single protective material will protect against all chemicals for all situations. The best course of action is to test the primary garment materials against the specific chemical hazard, at the temperature and in the concentrations to be encountered. Kappler, Inc. will provide free swatches of primary garment materials for testing and help arrange to have these tests performed.

## ***Static Electricity***

Under certain conditions, such as cold and dry weather, it is possible for garments to build and discharge static electricity. Discharges are not normally dangerous except in situations where generation of an electrical spark could ignite a flammable atmosphere. When working around flammable chemicals, steps to eliminate potential static discharges should be used. In these situations, recommended precautionary steps include the use of an over-cover, raising humidity level of the work area, and/or using a commercial anti-static application.

## ***Avoid Continuous Exposure***

This garment should not be immersed in chemicals. This garment should not be exposed to continuous hazardous liquid chemical splash or deluge. Do not wade through liquid pools of hazardous chemicals if not necessary. Direct chemical exposure to the garment should be as limited as possible. If exposed to direct splash or deluge of hazardous chemicals, leave the area immediately and decontaminate.

## **Sock Booties**

The sock booties attached to this garment are designed to be worn inside outer chemical boots. These sock booties do not have sufficient durability or slip resistance to be worn as outer boots.

## **Provide Hearing Protection**

If noise levels inside the garment exceed regulatory noise levels, hearing protection must be provided. Use hearing protection recommended by

- a safety professional and which does not interfere with the operation or use of the garment.

### ***Communications***

A vapor-protective garment hampers communication. The use of a personal communication system should be considered. Users should also consider the use of hand signals to communicate during training, work, and for emergency situations where respirators and totally encapsulating garments are worn.

## FULL VISUAL INSPECTION

To perform a full visual inspection:

- ▶ Choose a clean, dry area that is free of potential sources of snags, tears and punctures.
- ▶ Mark suspected defects with colored adhesive tape.
- ▶ Visually inspect seams for tape lift or delamination.
- ▶ Visually inspect for surface damage or discoloration on material, visor, gloves and zipper closure.
- ▶ Check zipper closure for worn or damaged parts. Run your fingers along the zipper teeth to feel for imperfections or separation.
- ▶ Check function of zipper and slider.

Garments with visible holes, tears, rips, punctures, serious discoloration, or abrasions should not be used.

Note any remarks in the inspection log. If the garment is unsuited for use by visual inspection, the garment may be retired and designated for training use after being permanently labeled “For Training Use Only” or disposed of properly.



## caution

**The garment should undergo a full visual inspection at the following times:**

*Upon receipt to ensure no damage has occurred during shipment.*

*Prior to first donning of garment.*

*After a garment is worn and before the garment is made available for reuse.*

*Annually.*

*However, most performance properties of a vapor protective ensemble cannot be tested by the user in the field.*

## RETURNING THE GARMENT

Durachem® garments are not designed to be repaired. In some instances the garment may be returned for inspection and possible replacement. If a garment fails a visual inspection contact Kappler Inc., to authorize the return. Contaminated garments will not be accepted for repair. Discoloration or odors are evidence of contamination. Garments being returned must be accompanied by the usage log and The Returned Good Authorization Form from Kappler, stating the suit has not been contaminated. *Note: Charges may be incurred. See warranty information pg 19.*

## Storage

### Storage Life

Kappler Durachem® garments contain materials for which there is no specific storage life data available. In addition, there is no industry standard by which the shelf or storage life of materials can be assessed. The gloves and boots specific to this ensemble have no storage life data currently available.

### Storage Conditions

Garments should be stored away from direct sunlight, preferably in a cool, dry location that is not subjected to extreme hot or cold conditions. Garments should be stored in their original boxes, in bags, or on hangers. Garments should be stored with the zipper open.

## CLOSURE LUBRICANTS

There are no lubricants recommended for the closure system.

## MARKING RECOMMENDATIONS AND RESTRICTIONS

The garment may be marked with Kappler® ChemTape® for identification. Indelible inks may not be removed from outer woven fabric.

## RESPIRATOR CONSIDERATION FOR ENSEMBLES

Ensembles must be used with NIOSH CBRN approved self-contained breathing apparatus (SCBA). The SCBA tested with this Durachem® ensemble was a Scott AV 3000 Sure Seal.

## SIZING CONSIDERATIONS

The Durachem® garment sizing chart should be used to determine accurate fit. The correct size garment should be worn. *See Appendix B pg 24*

## DONNING THE GARMENT

1. An assistant should help the wearer don the garment.
2. Remove all jewelry and personal items (pens, key rings, badges, pagers, knife cases, etc.) that might damage the garment.
3. Check function of respirator and place nearby donning location.
4. Visually check size and condition of outer boots and place nearby donning location.
5. Open garment zipper closure completely.
6. Read garment size label to assure proper fit.
7. Conduct a brief visual inspection of the garment before beginning donning procedure.

- garment should be free of discoloration, or physical damage
  - inner gloves should be fully inserted in outer gloves
8. Remove shoes. The sock boots on this garment are worn inside outer chemical boots. These sock boots do not have adequate durability or slip resistance to be worn over footwear as an outer covering.
  9. While sitting, insert feet into garment legs and down into sock boots. Stretch legs out to maximum extension while pulling garment up around hips.
  10. Pull boot splash flaps up and don outer boots. Fold splash flaps down over boots as far as possible.
  11. Place one hand in the sleeve, pull garment sleeve to shoulder and place hand into gloves.
  12. Place other hand in sleeve and place hand into gloves.
  13. Don respirator face piece and tighten head straps to secure.
  14. Pull hood over the head and secure, ensure proper fit between respirator face piece and garment elastomeric face seal.
  15. Slowly close the zipper. After checking that the zipper is completely closed, the flaps should be closed and sealed over the zipper.
  16. The user should squat down and expel the air inside the garment through the face seal interface
  17. For Class 1 applications, don the knit Kevlar over glove.

## DOFFING THE GARMENT

1. If the garment has been contaminated or suspected of being contaminated, the wearer should continue to use his respirator until the garment has been doffed and removed.
2. An assistant should help the wearer doff the garment after field decontamination. If the garment has been contaminated, the assistant should wear protective clothing and respiratory equipment.
3. While the wearer stands, the assistant should open the zipper closure and peel the garment down and away from the wearer's shoulders. The assistant should help the wearer remove his arms from the sleeves.
4. Lower garment below the hips and sit down. Have the assistant remove the boots, pull the garment off the legs and remove the garment to a remote location.
5. Once the garment has been removed, the wearer can doff the respiratory face piece and harness.

## INTERFACE ISSUES

The user should ensure respirators, boots and gloves, as applicable, are properly interfaced. There are no special procedures for donning outer boots.

**caution**

*Ensuring proper seal and fit between the respirator and the face piece and the elastomeric face seal is critical to the overall performance of the ensemble.*

## DECONTAMINATION AND CLEANING OF CHEMICAL AND BIOLOGICAL CONTAMINATION

### ***Decontamination Solutions***

The only decontamination solutions to use with this garment are water and mild, household dishwashing liquid. Do not use any oxidative, corrosive or reactive decontamination solutions with this garment.

### ***Field Decontamination***

The purpose of field decontamination is to allow the wearer to doff the garment without being harmed by contaminants on the garment surface. Garments that have been exposed to or that are suspected to have been exposed to chemical or biological contamination should be field decontaminated before doffing. Additional cleaning, decontamination, a full visual inspection and a pressure test are required before a garment may be reused.

1. Leave the hot zone with adequate air supply for decontamination and removal of the garment. The wearer should continue to wear the respirator until the garment has been completely doffed and removed from the area.

2. If the garment has been exposed or is suspected to have been exposed, thoroughly scrub the garment using household dishwashing liquid and soft scrub brushes, followed by a thorough rinsing in water.
3. If possible, the excess rinse water should be removed from the garment by individuals wearing gloves, liquid-splash protective clothing and respiratory protection. At a minimum, the excess rinse water on and near the closure assembly should be removed with a dry cloth to ensure wearer is not exposed to chemical.

### ***Decontamination before Reuse***

It is the responsibility of the safety professional having jurisdiction over usage of the garment to determine whether the garment has been adequately decontaminated and can be safely re-used.



#### **caution**

*This garment is designed for multiple uses, single exposure. It is priced to make disposal after use economically justified when the effectiveness of decontamination is in question. This garment is not designed for multiple exposures and multiple decontaminations. This garment is not designed to be repaired.*

A qualified individual should develop and implement a decontamination procedure for each of the chemicals to which the garment has been exposed. The decontamination procedure should include complete information on the type of contamination, as well as the level of contamination involved.

Contaminated garments should be discarded. Contaminated garments are not suitable for training purposes.

### ***Maintenance and Cleaning***

No reactive or corrosive decontamination solutions should be used with this garment. Only water and mild, household dishwashing liquid should be used as decontamination liquids.

Only garments that have been thoroughly cleaned and dried may be considered for use. Water and mild household dishwashing liquid should be used to clean this garment. This garment may be scrubbed with a soft brush or hand towel, thoroughly rinsed with clean, fresh water and air-dried. Do not use any oxidative, corrosive or reactive decontamination solutions with this garment. Do not dry-clean this garment. Do not use hot air or a tumbling air dryer to dry this garment. Hang the garment in a cool, dry area to ensure proper drying of the garment.

## **RETIREMENT CONSIDERATIONS**

Retired garments that are not contaminated may be labeled and used "For Training Use Only". The labeling should be done with a permanent marker.

## DISPOSAL

This garment may be safely disposed of in a facility capable of handling plastic items containing polyolefin, polyester and vinyl plastics. Severely contaminated garments may need to be treated as and disposed of as hazardous wastes.



### caution

*It is recommended this garment be retired from service if any of the following criteria are met:*

*Garment is abraded, cut, torn, punctured, or otherwise in any way breached.*

*Garment has received an exposure to a toxic chemical.*

*Zipper has separated or imperfections are noted.*

## WARRANTY INFORMATION

It is the responsibility of the user to select garments which are appropriate for each intended use and which meet all specified government and industry standards.

Kappler Durachem® 500 garments are designed for multiple use, single exposure. It is the responsibility of the wearer to inspect garments periodically to ensure that all components, including fabric, valves, visors, gloves, zippers, seams, and interfaces are in good working condition and provide adequate protection for the operation and chemicals to be encountered. Failure to fully inspect garments may result in serious injury or death to the wearer. Never wear garments that have not been

fully inspected prior to use. Any garment which does not pass the visual inspection should be removed from service immediately.

Kappler warrants for a period of 90 days after the delivery of a Durachem® 500 garment, that the garment is free from defects in materials and workmanship when used in accordance with the instructions contained in this care and use manual. No other expressed or implied warranties of fitness for a particular purpose or of merchantability or otherwise is made. Purchaser and all garment users shall promptly notify Kappler of any claim, whether based on contract, negligence, and strict liability or otherwise.

The sole and exclusive remedy of the purchaser and all end users and the limit of liability of Kappler for any and all losses, injuries or damages shall be the refund of the purchase price or the replacement or repair of any product found to be defective within 90 days after the product is delivered. In no event shall Kappler be liable for any special, incidental or consequential damages, whether in contract or in tort, arising out of any warranties, representations, instructions, or defects from any cause in connection with the Durachem® 500 series garment, or the sale thereof.

Purchaser and all users are responsible for inspection and proper care of this product as described in this care and use manual and are responsible for all loss or damages from use or handling which results from conditions beyond the control of the manufacturer.

Durachem® 500 is a Kappler registered trademark

## APPENDIX A-TECHNICAL DATA PACKAGE

### NFPA 1994 PERFORMANCE DATA

Available on request from Kappler

### SIZING INFORMATION

Sizes available: XS, SM/MD, LG/XL, 2X/3X, 4X, 5X

See attached chart (Appendix B)

## GARMENT MATERIAL AND COMPONENT DESCRIPTIONS

#### *Garment material*

The primary garment material is Kappler Durachem® 500 chemical barrier fabric.

#### *Elastomeric Interface Material*

The interface material is fire retardant butyl.

### *Glove Material and Assembly*

The glove assembly consists of two layers:

- Inner glove: Guardian 25 mil butyl
- Outer glove: Showa Kevlar Model 177

These gloves are unlined and have no surface treatments applied.

## SOCK BOOT OR BOOTIE MATERIAL

The garment is made with an integrated sock bootie of Durachem® 500 material. The user must wear separate outer chemical safety boots.

## PHYSICAL FOOT PROTECTION

The OnGuard HazMax #87012 or Tingley #82330 boot must be worn over the integrated bootie for compliance to NFPA 1991.

The OnGuard HazMax #87012 is one piece injection molded with anti-slip resistance and steel toe, steel shank and steel midsole. Polyester lining. Men sizes 6-15. Green.

The Tingley Hazproof #82330 is one piece injection molded with anti-slip resistance and steel toe, steel shank and steel midsole. No linings or surface treatments.

Men sizes 7-13. Orange.

## ZIPPER/CLOSURE TYPE AND MATERIAL

The zipper is 44-48" long with molded nylon teeth. The slider components are aluminum bronze. The closure is mounted on polyurethane tape. Location of zipper is along the center back. The outside of the zipper is protected by a flap composed of garment material. The closure is fastened by a hook/loop system.

The Zipper/Closure system has not been tested for permeation resistance.

## MATERIAL SEAM TYPES AND COMPOSITION

### Garment Material

The seam is made using a single needle lock stitch seam. The sewing thread is Nylon. The tapes are composed of a chemical barrier film that is heat-sealed over the inside seam.

### Garment Material- Interface Material

The visor is sewn to the outside of the garment material. The edge of the interface is covered with the same barrier film tape as the garment seams.

### Garment Material- Glove

The glove assembly is permanently connected to the sleeve.

## Garment Material Footwear

The footwear is not attached to the garment material. The protective footwear is worn over the integral sock boot.

## Garment Material- Garment Closure

The closure is sewn to the outside of the garment material. The edge of the zipper is covered with the same barrier tape used on material seams.

## TESTING DEVICES

Kappler Pressure Test Kit. *Refer to part number AKMOC and AKM007*

## EXTERNAL GASKET TYPES AND MATERIALS

Flat black rubber gasket and plastic ring on exhaust valves

## TYPE OF STYLE HEAD PROTECTION ACCOMMODATED WITH THIS GARMENT


The Durachem® 500 ensemble will accommodate Type 1 Class G helmet.

## DURACHEM® GLOVE SIZING CHART

Glove Size	Hand Circumference	Hand Length (in)	Garment Size Option
Extra Small	7	6-3/4	XS
Small	7	6-3/4	SM/MD
Medium	8	7-3/16	SM/MD
Large	9	7-9/16	LG/XL
X-Large	10	8-1/16	LG/XL
2X-Large	11	8-7/16	2X/3X, 4X, 5X

## APPENDIX B - DURACHEM® SIZING CHART

Height-ft/in/cm

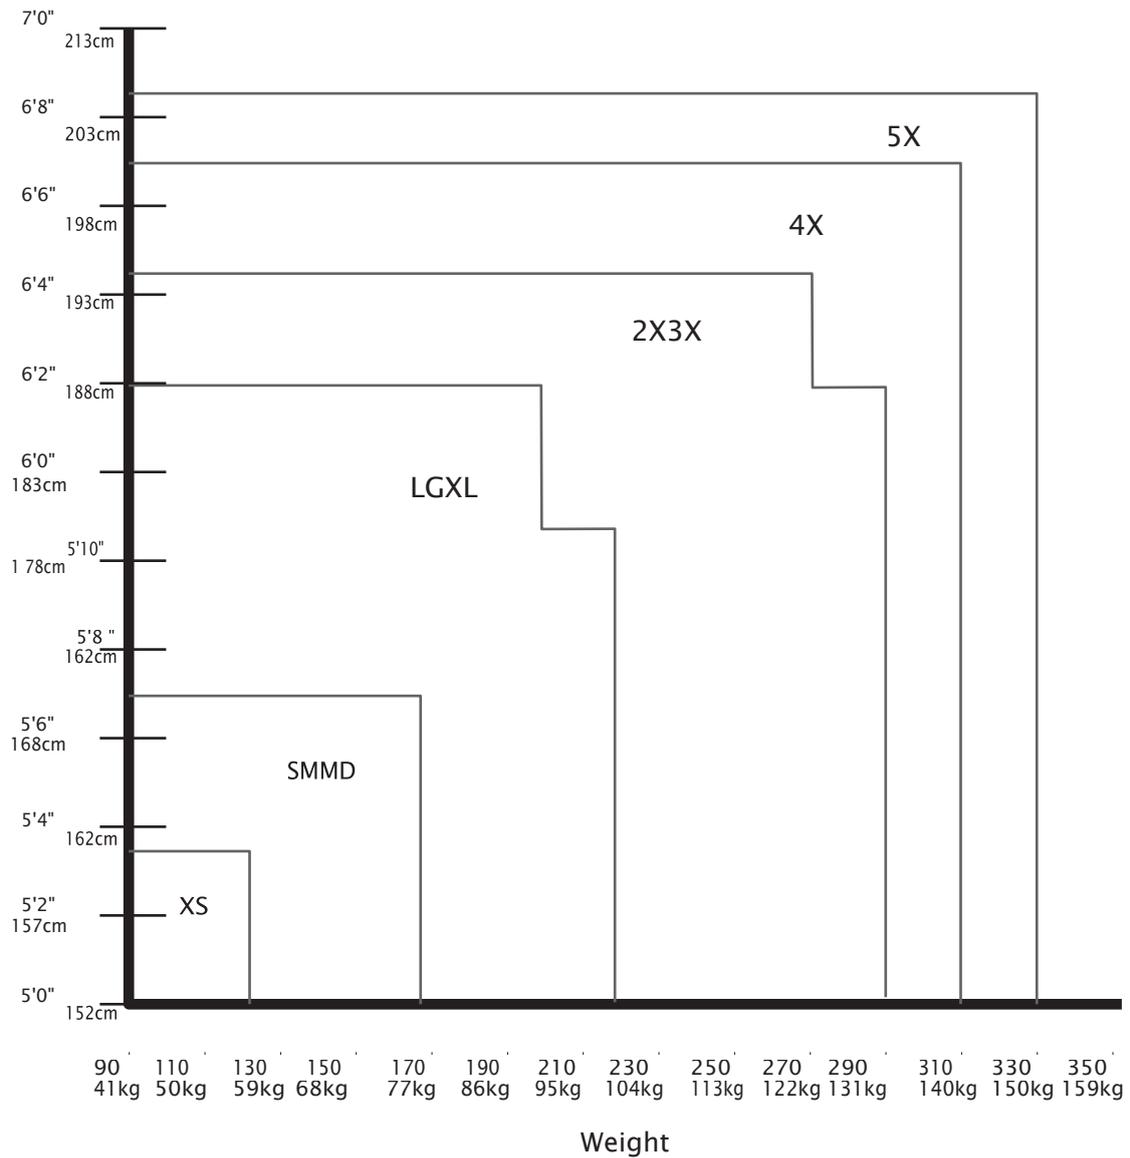

**Please Note:** This chart is based on individuals wearing S.C.B.A., safety helmet and suggested underclothing (see Recommended Undergarments).

